

Music Player

1. Plugin



2. Open lid to play




3. Close lid to stop




4. Skip to next tune button



5. Adjust volume

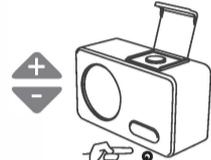

Insert a pen to press & hold the two inset buttons: Volume Up or Volume Down. Hold for 5 seconds before volume changes. Release when at desired volume.

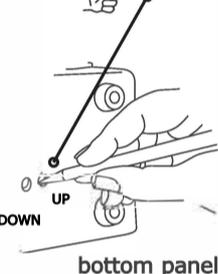

bottom panel

Loading new songs:


- i) First, unplug the power.
- ii) Then connect the USB cable to your computer & the Music Player.
- iii) The Music Player may appear as 'SMPV100' device on your computer, or it may appear as another 'Drive'.
- iv) 'Copy and paste' or 'drag & drop' your MP3 files across from the computer to the Music Players' Drive (i.e. 'SMPV100' or 'Drive K', etc.). See section 'CONVERT FILES'

Please note:

Do not plug in the power cable while the device is connected to a computer. Music files will play in the order in which they are added to the player. The Music Player does not have a shuffle function. There are 40 pre-loaded songs on the simpl Music Player.

Back Panel Ports

USB headphone next play/pause

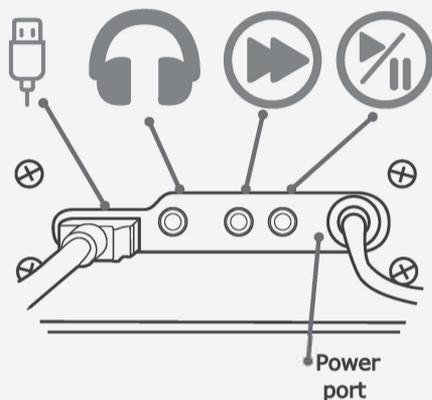

Note: depending on the users' cognitive level, we recommend 30-40 songs to begin. However the music player memory can hold up to 1,000 songs.

CONVERT FILES:

The simpl Music Player will play audio files in .mp3 format. If your files are in a different format (i.e. m4a), go to simpltec.com/music-player-details for conversion instructions.

WARRANTY:

Simpl Technology warrants its Simple Music Player (to be free of defects in material and workmanship) twelve (12) months from the date of purchase. Within the Warranty Period, the warranty is limited to the repair or replacement of defective parts only at the discretion of Manufacturer.

The warranty may be void if the simpl™ Music Player is damaged or destroyed as a result of one or more of the following: willful abuse or neglect; modification of the unit; using alternative power supplies to that provided; use of organic solvents, strong acids or petroleum-based solvent/ammonia

SAFETY INSTRUCTIONS:

The device shall not be exposed to dripping or splashing or near a bathtub. The device should be situated away from heat sources such as radiators, heat registers, stoves or other appliance (including amplifiers) that produce heat. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, or chewed by pets. To avoid the risk of electric shock, do not remove the cover of the apparatus. There are no user serviceable parts inside. Do not operate this product if the main lead is damaged.

COMPLIANCE:

Operation is subject to the following three conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. 3) Changes or modifications to the electronics in the device by an unauthorized dealer or technician will void the warranty.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

TECHNICAL SUPPORT: DO NOT RETURN UNIT TO RE-SELLER.

Please call 1-833-237-4675 x 1 or email support@simpltec.com or visit www.simpltec.com/music-player for video and Q&A.

For WARRANTY SERVICE, contact us first.

USA: SIMPL Technology, 1064 1st New Hampshire Turnpike, Northwood, NH 03261

CANADA: SIMPL Technology, 100 Hanlan Rd. Unit #3, Woodbridge, ON L4L 4V8

