

STEP 1

Pick up the handset



STEP 2

Press & hold the selected photo button for about 3 seconds until you hear a 'beep', then release the button

STEP 3

Enter the number using the keypad as you would normally dial. Ignore any sounds you may hear from the handset during programming.

STEP 5

Hang up the receiver. The number is saved. Stored numbers will be retained when phone is unplugged.

STEP 4

Press & release the same photo key again. Do not long-press or wait for a beep this time.



NOTE: Handset volume controls are temporary - press to increase or decrease the volume during a call.