



# simpl. Music Player

## User Guide


### 1. Plug in

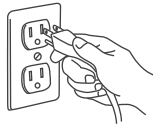

### 2. Open lid to play

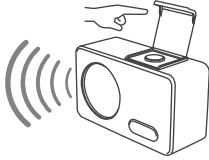


### 3. Close lid to stop

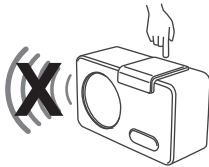


### 4. Press to skip to the next song



### 5. Adjust volume

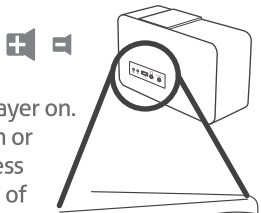

Turn the Player on. Using a pen or pointer, press & hold one of the two inset buttons, Volume Up or Volume Down. Hold for 5 seconds and the volume will begin to change. Release at desired volume.

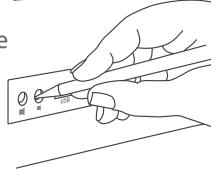

Back panel

### Loading new songs:

- i) First, unplug the power.
- ii) Then connect the USB cable to your computer & the Music Player.
- iii) The Music Player may appear as 'SMPV100' device on your computer, or it may appear as another 'Drive'.
- iv) 'Copy and paste' or 'drag & drop' your MP3 files across from the computer to the Music Players' Drive (i.e. 'SMPV100' or 'Drive K', etc.). If your music files are not MP3 format, please see 'CONVERT FILE' section on the back.

### Please note:

- Do not plug in the power cable while the device is connected to a computer
- Music files will play in the order in which they are added to the player
- The Music Player does not have a shuffle function
- There are 40 pre-loaded songs on the simpl Music Player

## Back Panel Ports

